




# AIR TAPPING TOOL

## Item No.: PC-2010

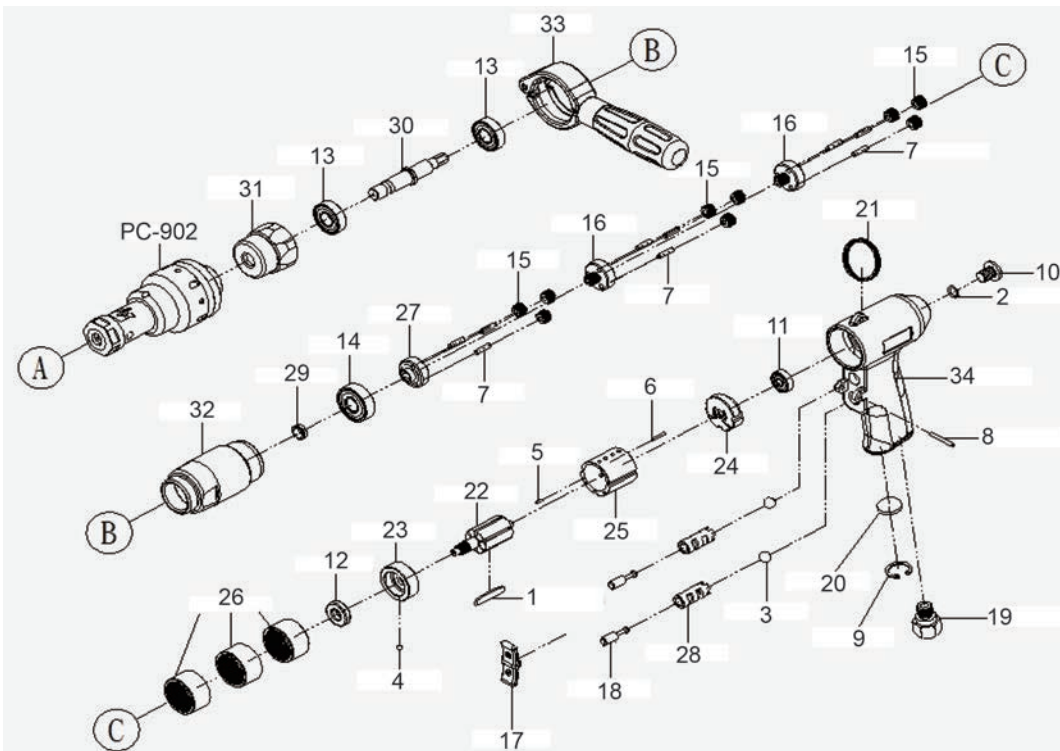

# Part List

Item No : PC-2010



NO.	PART NO.	DESCRIPTION	Q'TY
1	PC-2010T01	Rotor Blade ( 6PCS )	1SET
2	PC-2010P02	O-Ring (P8x1.5)	1
3	PC-2010T03	Plastic Ball( $\phi$ 9 ) ( 2PCS )	1SET
4	PC-2010P04	Steel Ball( $\phi$ 4mm)	1
5	PC-2010P05	Pin ( $\phi$ 2x6)	1
6	PC-2010P06	Pin ( $\phi$ 2x14)	1
7	PC-2010T07	Pin ( $\phi$ 4x15) ( 9PCS )	1SET
8	PC-2010P08	Pin ( $\phi$ 3x24)	1
9	PC-2010P09	Stopping Wheel	1
10	PC-2010P10	Screw	1
11	PC-2010P11	Ball Bearing (626-2Z)	1
12	PC-2010P12	Ball Bearing (R6)	1
13	PC-2010T13	Ball Bearing (6001-2Z) ( 2PCS )	1SET
14	PC-2010P14	Ball Bearing (6201-2Z)	1
15	PC-2010T15	Gear ( 9PCS )	1SET
16	PC-2010T16	Gear ( 2PCS )	1SET
17	PC-2010P17	Switch Lever	1
18	PC-2010T18	Rod ( 2PCS )	1SET

NO.	PART NO.	DESCRIPTION	Q'TY
19	PC-2010P19	Air Inlet	1
20	PC-2010P20	Muffler	1
21	PC-2010P21	Hook	1
22	PC-2010P22	Rotor	1
23	PC-2010P23	Front Plate	1
24	PC-2010P24	Rear Plate	1
25	PC-2010P25	Cylinder	1
26	PC-2010T26	Gear Ring ( 3PCS )	1SET
27	PC-2010P27	Gear Seat	1
28	PC-2010T28	Bushing ( 2PCS )	1SET
29	PC-2010P29	Bushing ( 2PCS )	1
30	PC-2010P30	Driving Rod	1
31	PC-2010P31	Front Cap	1
32	PC-2010P32	Front Cap	1
33	PC-2010P33	Handle	1
34	PC-2010P34	Handle	1
35	PC-902	Torque Tapping Chuck	1